




## Traditional Waste & Overflow

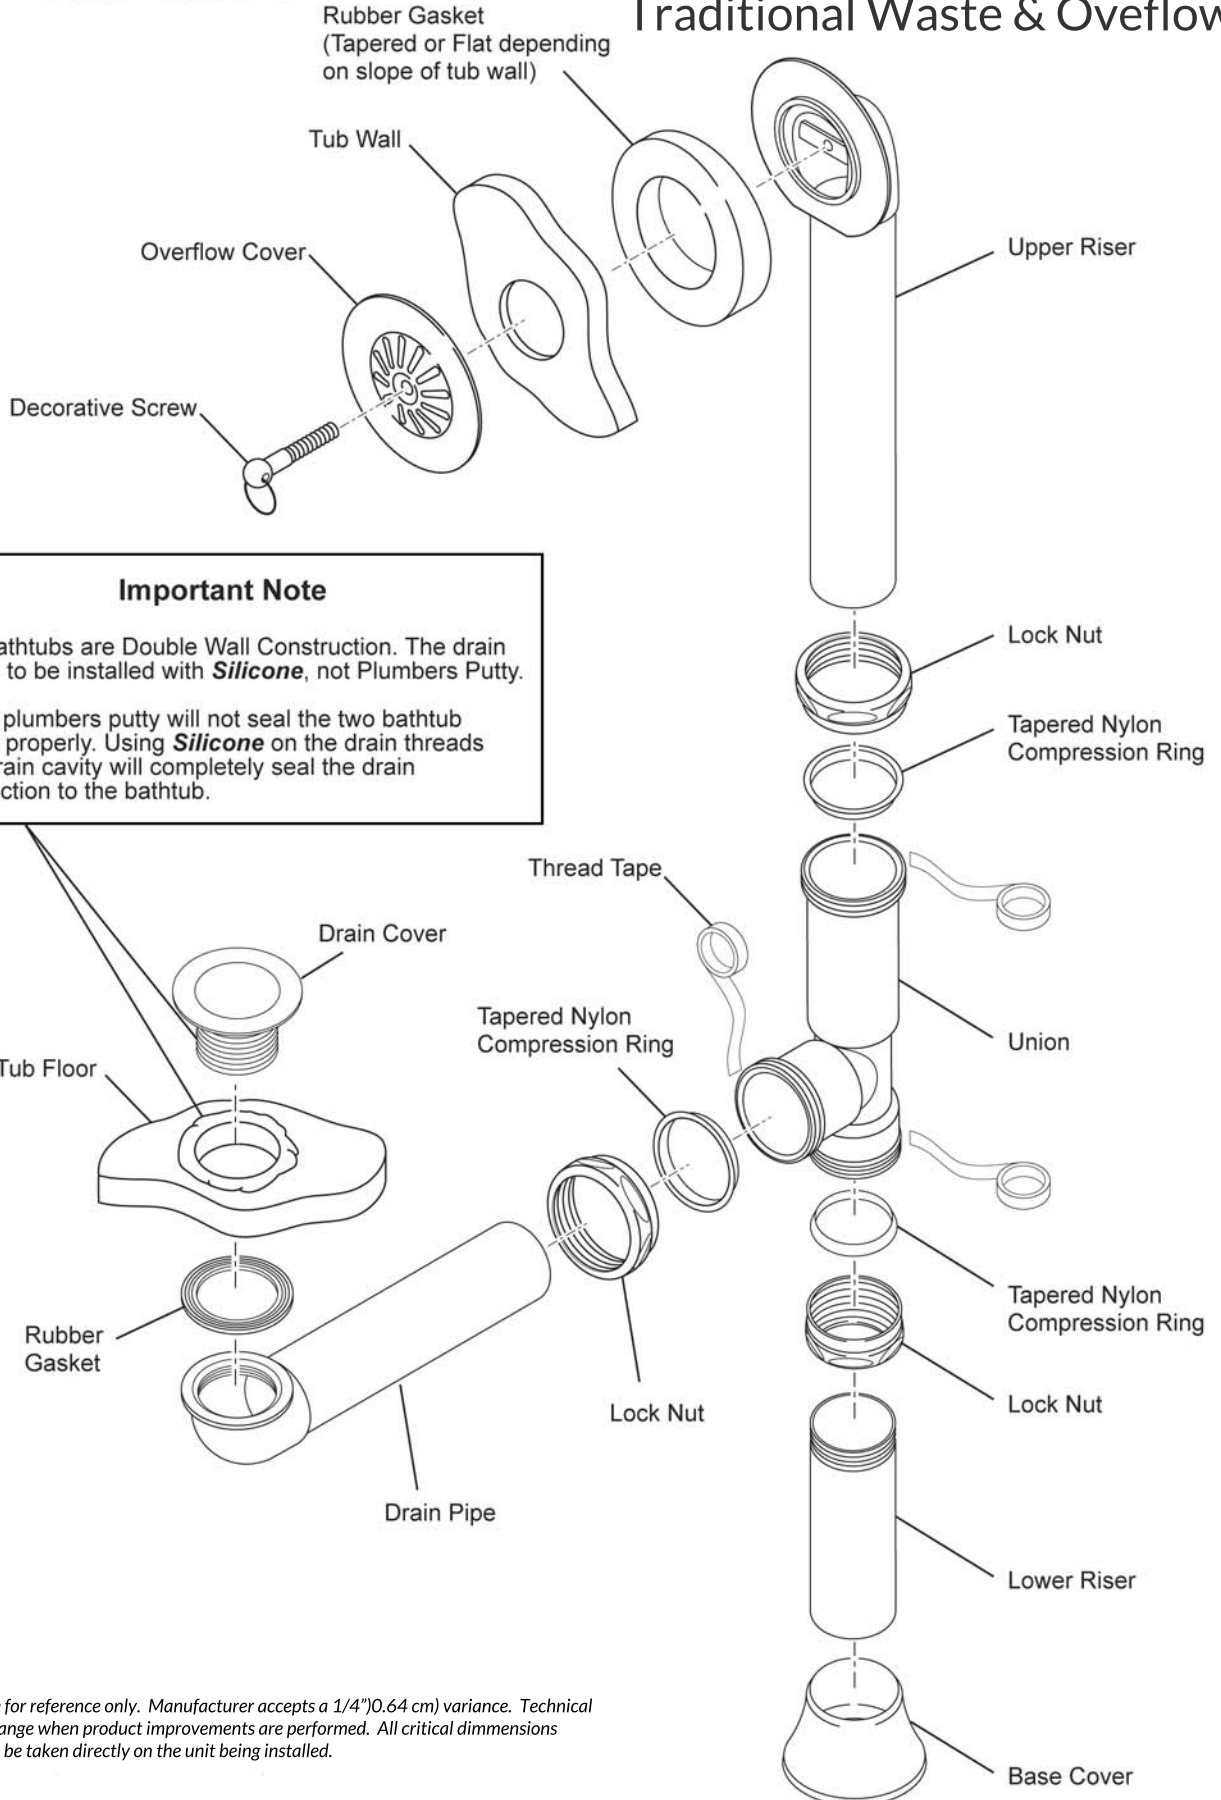

**Important Note**

Our bathtubs are Double Wall Construction. The drain needs to be installed with **Silicone**, not Plumbers Putty.

Using plumbers putty will not seal the two bathtub layers properly. Using **Silicone** on the drain threads and drain cavity will completely seal the drain connection to the bathtub.

*All published dimensions are for reference only. Manufacturer accepts a 1/4" (0.64 cm) variance. Technical specifications are subject to change when product improvements are performed. All critical dimensions required for installation should be taken directly on the unit being installed.*